


HIGH-PRESSURE WASHERS

Exploded view of the pump

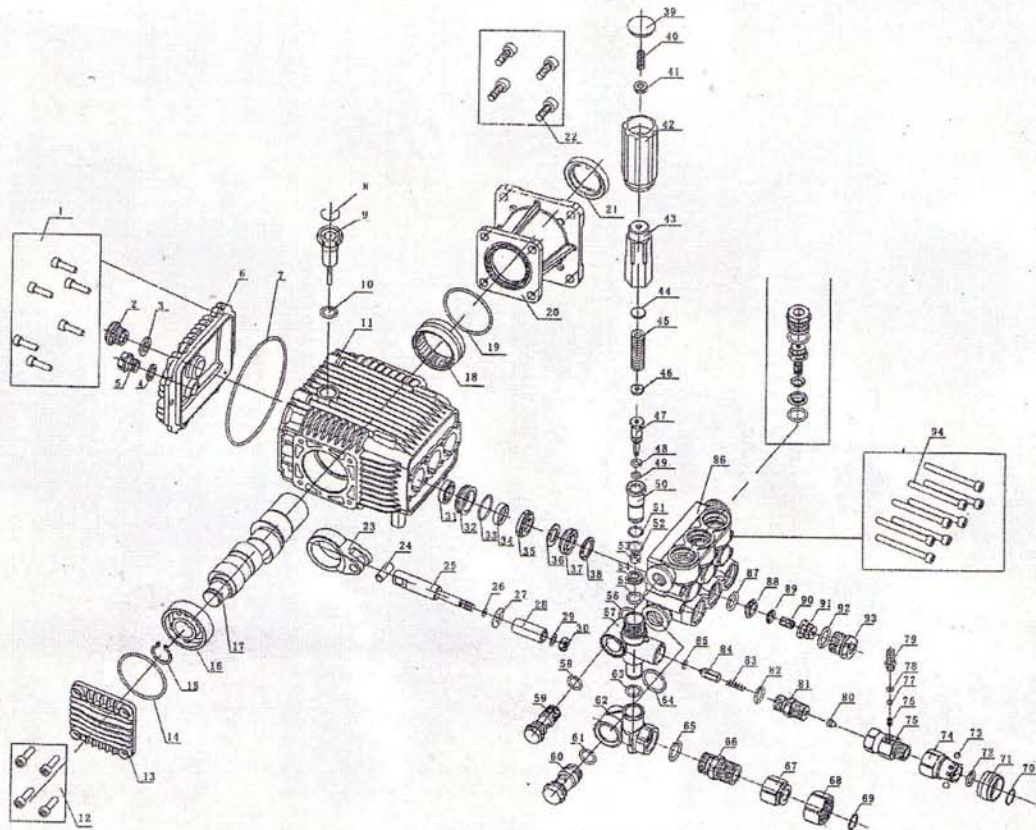

Parts list of the pump

1	Bolt, Cover of Crank Case	25	plunger rod	49	inner gasket, valve jacket	73	steel ball, QD
2	Oil Gauge	26	gasket, plunger rod	50	water return valve jacket	74	3/8" QD body
3	gasket oil gauge	27	water checking flake	51	outer gasket valve jacket	75	detergent injector
4	Gasket ,Oil Drain Plug	28	ceramic plunger	52	outer gasket, valve jacket	76	spring, injector
5	Oil Drain Plug	29	washer,plunger fix nut	53	water return valve core	77	Ball ,injector
6	Crank case cover	30	plunger fix nut	54	water return valve seat	78	gasket, injection nozzle
7	Gasket ,cover of crank case	31	plunger oil seat	55	gasket, valve seat	79	injection nozzle
8	cover,oil inlet plug	32	locating ring	56	gasket, outlet tee connector	80	water shooting tube
9	oil inlet plug	33	gasket,locating ring	57	water outlet tee connector	81	water outlet joint
10	gasket, oil inlet plug	34	locating ring water seal	58	gasket, fix blot	82	gasket water outlet joint
11	crank case	35	compaction ring,water seal	59	fix blot, outlet tee connector	83	spring water outlet cone valve
12	bolt, crank shaft cover	36	compaction flake water seal	60	fix blot,inlet tee connector	84	water outlet cone valve
13	crank shaft cover	37	U-Packing	61	gasket,inlet tee connector	85	gasket water outlet cone valve
14	gasket bearing cover	38	U-Packing seat	62	water inlet tee connector	86	cylinder
15	bearing clip	39	Pressure adjusting handle cover	63	gasket, the two tee connectors	87	gasket ,check valve
16	ball bearing	40	Pressure adjusting screw	64	gasket inlet tee connector	88	washer check valve
17	crank shaft	41	fix nut,adjusting screw	65	gasket water inlet connector	89	check valve stoper
18	needle rotter bearing	42	pressure adjusting handle	66	water inlet connector	90	spring check valve
19	gasket,bearing cover	43	pressure adjusting seat	67	clip	91	check valve box
20	flange	44	upper washer,spring	68	water inlet swivel nut	92	gasket compaction cap
21	oil seal,flange	45	pressure adjusting spring	69	clip	93	check valve compaction cap
22	bolt ,flange	46	under washer, spring	70	gasket, 3/8" QD	94	bolt cylinder
23	connecting rod	47	water return valve rod	71	compaction cap, QD		
24	plunger pin	48	gasket, valve rod	72	clip, QD		